

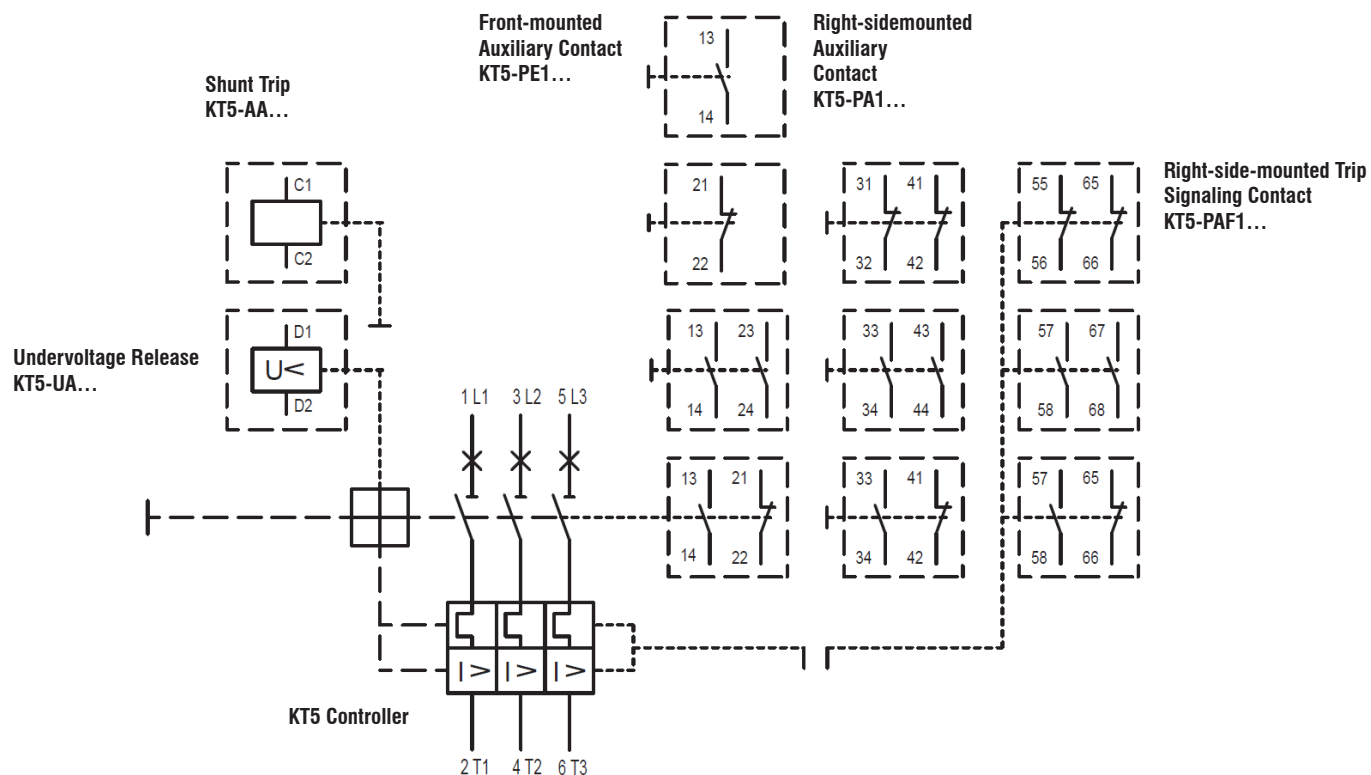
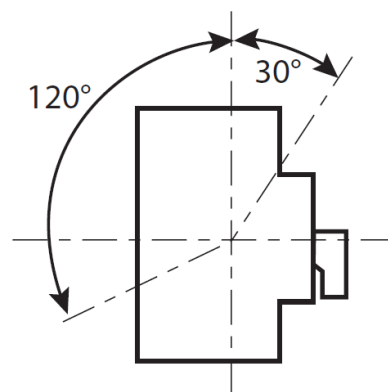


KT5 Wiring Example

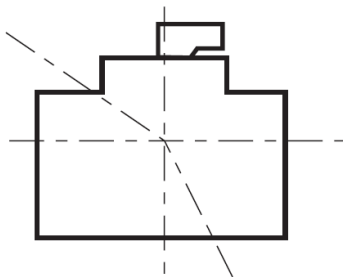



KT5 Mounting Position

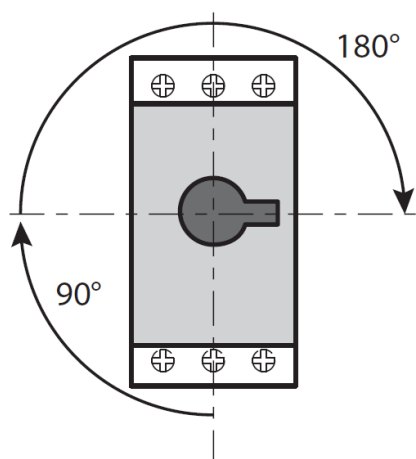

❶ No backup fuse required.



KTA5-32A-0.16A...16A Manual Motor Controller

Dimensions are in millimeters (inches). Dimensions not intended for manufacturing purposes.

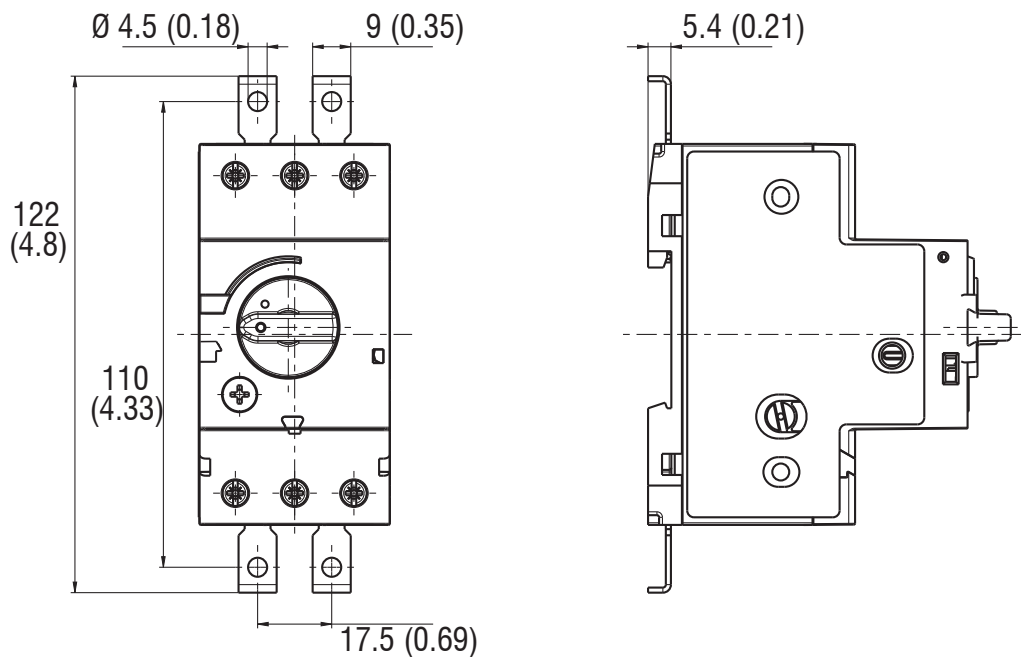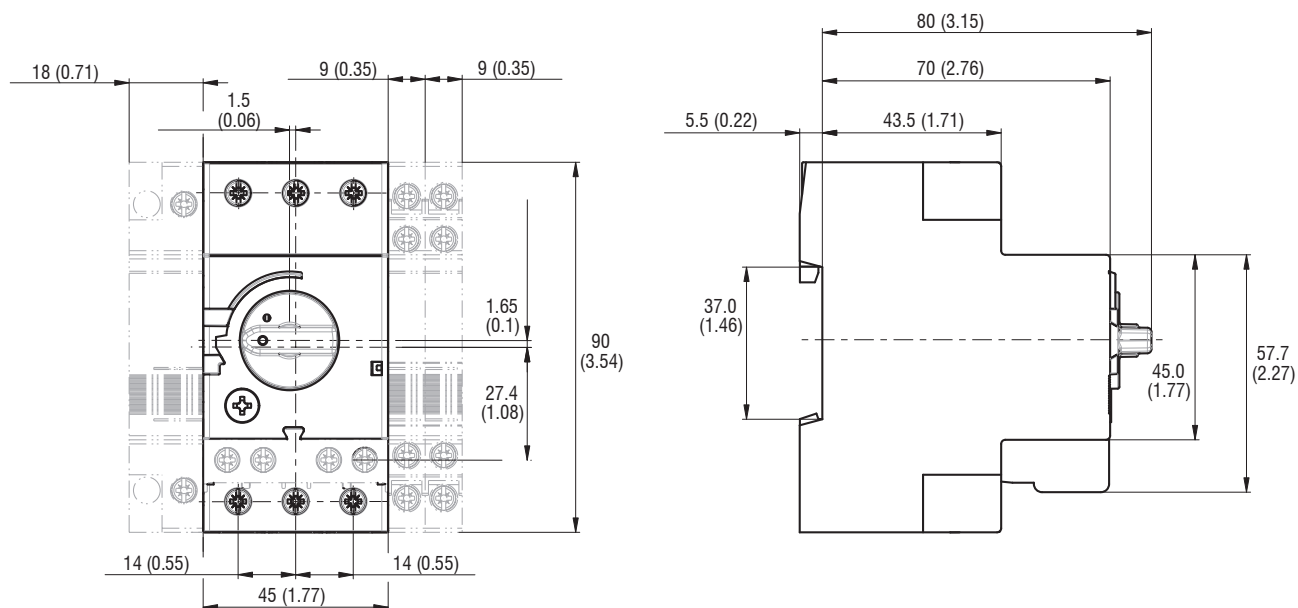
KTA5-32A-0.16A...16A Manual Motor Controller (with Accessories)


KTA5-32A-20A...32A Manual Motor Controller

Dimensions are in millimeters (inches). Dimensions not intended for manufacturing purposes.

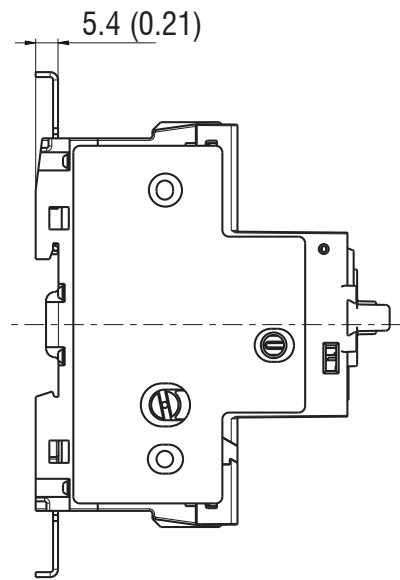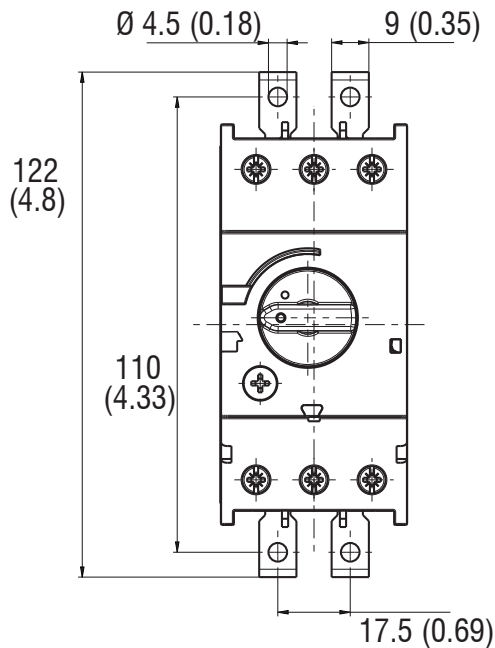

KTA5-32A-20A...32A Manual Motor Controller (with Accessories)

